

Data sheet for the exhibition of vehicles

Special conditions apply when exhibiting vehicles in the halls, which are displayed for fire protection and environmental protection requirements.

Extract from 4.4.1.2 Technical Guidelines of Landesmesse Stuttgart GmbH:

- The tank capacity of the vehicles must be reduced to the amount required for entering and exiting. Where possible, the tank caps must be closed and locked.
- Depending on the event and the installation site, further safety measures such as fuel tank inerting, disconnecting the batteries, pumping out the tank and/or the erection of safety guards may be required; the Exhibitor shall bear the arising costs.
- For vehicles with alternative drive technology, electric or hybrid drive, the drive batteries must be disconnected from the drive using a safety clamp switch (main switch). For vehicles with a gas powertrain the arrangement must be above the ground surface, the pressure tank must be emptied and depressurised.
- The refuelling of vehicles in the hall is prohibited. The vehicles must be checked for dripping fuel and lubricant and any soiling must be eliminated immediately.

See the Technical Guidelines of Landesmesse Stuttgart GmbH (Point 4.4.1.2)

www.messe-stuttgart.de/teilnahmebedingungen

The Exhibitor is responsible for implementing the aforementioned regulations and shall ensure that the exhibition of vehicles does not pose any risk.

For this reason the form „Notification to exhibit vehicles“ is completed as confirmation and a signed copy must be taken to the event and presented upon entry. If the exhibition vehicles are delivered by a freight company, the completed form must be forwarded to the freight company so it can present said form upon entry.

The plant fire department carries out random inspections on site.



